


MCHOSE

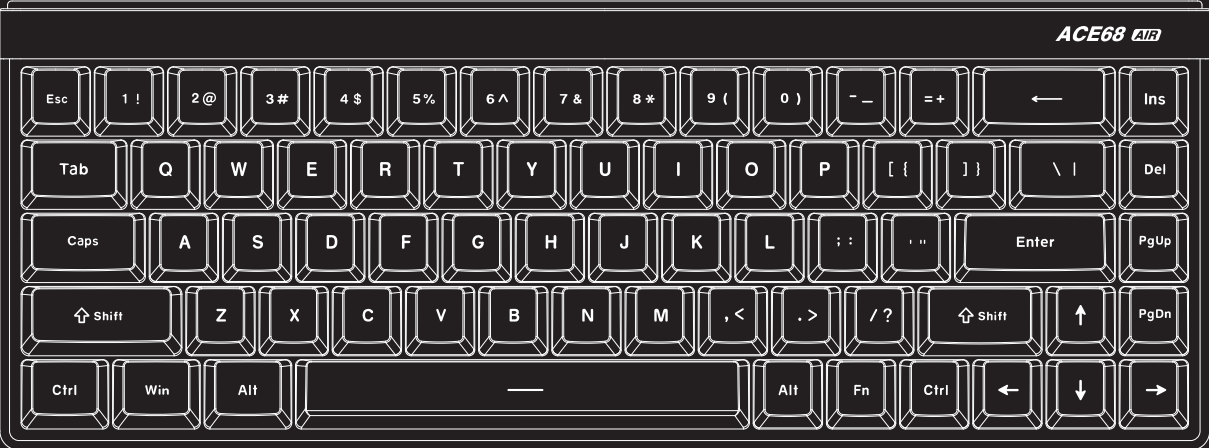

ACE 68 AIR HANDY GUIDE

·FN Key Combination Functions

	Windows System	Mac System	~	F1	F2	F3	F4	F5	F6	F7	F8	F9	
	+												
		F10	F11	F12	Pause	Print	Home	End	Previous Song	Next Song	Play/Pause	Stop	Mute
	Volume-	Volume+	Lock/Unlock Windows Key	Restore Default Settings (Spacebar)									

·Lighting Adjustments

	+												
		Lightbox ON/OFF	Switch Lightbox Mode	Lightbox Brightness -	Lightbox Brightness +	Switch Lightbox Color	Turn off/Turn on (Turn the keyboard LED lights on/off)	Switch backlight Color	Switch Backlight Effect	Backlight Brightness -	Backlight Brightness +	Backlight Speed -	Backlight Speed +